



PHITS - ASSEMBLY MANUAL


1. Remove the top cover of your speaker.
2. Disconnect the plug TP1 from the front panel.

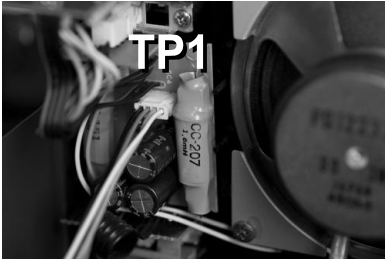

3. Remove the rest of the screws of the front panel and detach it.
4. Remove the piece of felt and carefully release the foam spacer.
5. Remove the screws from the lower part of the back cover.
6. Remove the protector from the adhesive of the plate A, place it inside as show the picture, taking care to snaps bellow the PCB of the connectors.
7. Strong press the plate so that it adheres well.

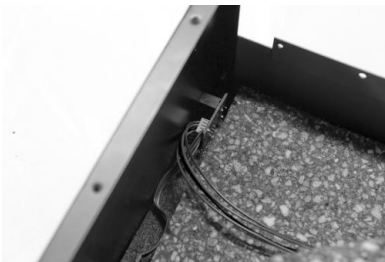

3. Remove the protector from the adhesive of the plate B.
4. Place the plate B on the top cover centered to the sides, leaving a gap of 7 mm on both sides and taking care that it rests on the connectors. Strong press the plate to fix well.

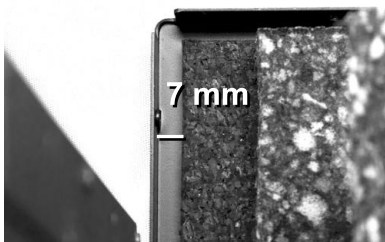

10. Remove the screws at the side of the back cover and remount the screws of the lower part.
11. Place the plates L and R such a way they snap between the plates A and B.



12. Reconnect the plug TP1 and remount the front panel of your speaker.
13. Fill uniformly the inside with the polyethylene fiber, taking care of not to press the driver.



14. Fit the plate C between the plates B, L and R.
15. Replace the top cover of your speaker. Be careful, the engagement with the front panel is very tight.



16. Mount all screws.

* Some models may vary from this manual.