


Trunk installation with a Door Jamb Antenna Mount: Keep the antenna as high as possible on the vehicle and install the UNUN right under the antenna or within 6" maximum from it. Keep the red tip of the UNUN oriented toward the mount. Make sure that the Door Jamb Antenna Mount is well grounded to the vehicle. Avoid installing the antenna too close to the cabin because the metal surface of the cabin will influence the SWR and reduce the performance of the antenna.

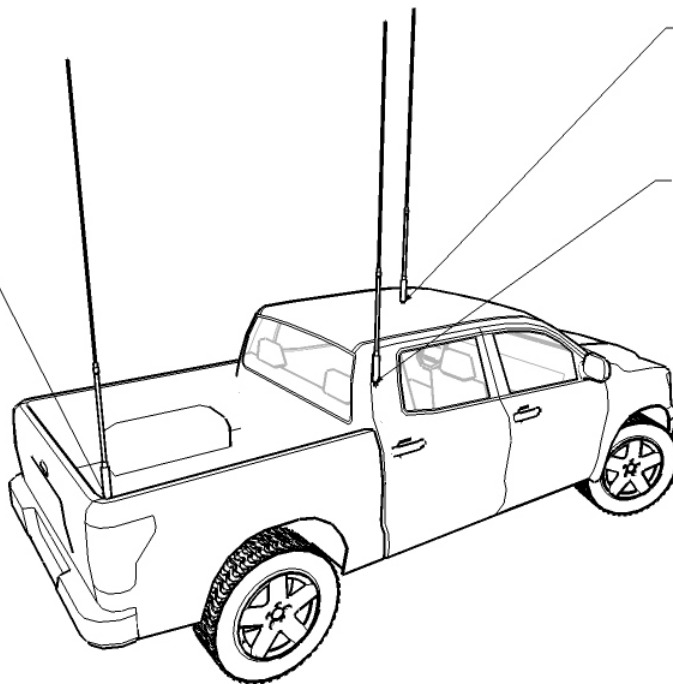

Rooftop installation with Mag-Mount: A secondary ground wire will be needed to ground the coax shield to the vehicle chassis or frame. The ground wire as to be as short as possible. The UNUN must be installed within 6" or less of the antenna with the red tip oriented toward the mount. The closer the better.

Door installation with a Door Jamb Antenna Mount: Keep the antenna as high as possible on the vehicle and install the UNUN right under the antenna or within 6" maximum from it. Keep the red tip of the UNUN oriented toward the mount. Make sure that the Door Jamb Antenna Mount is well grounded to the vehicle.

CHAMELEON V2L ANTENNA



